


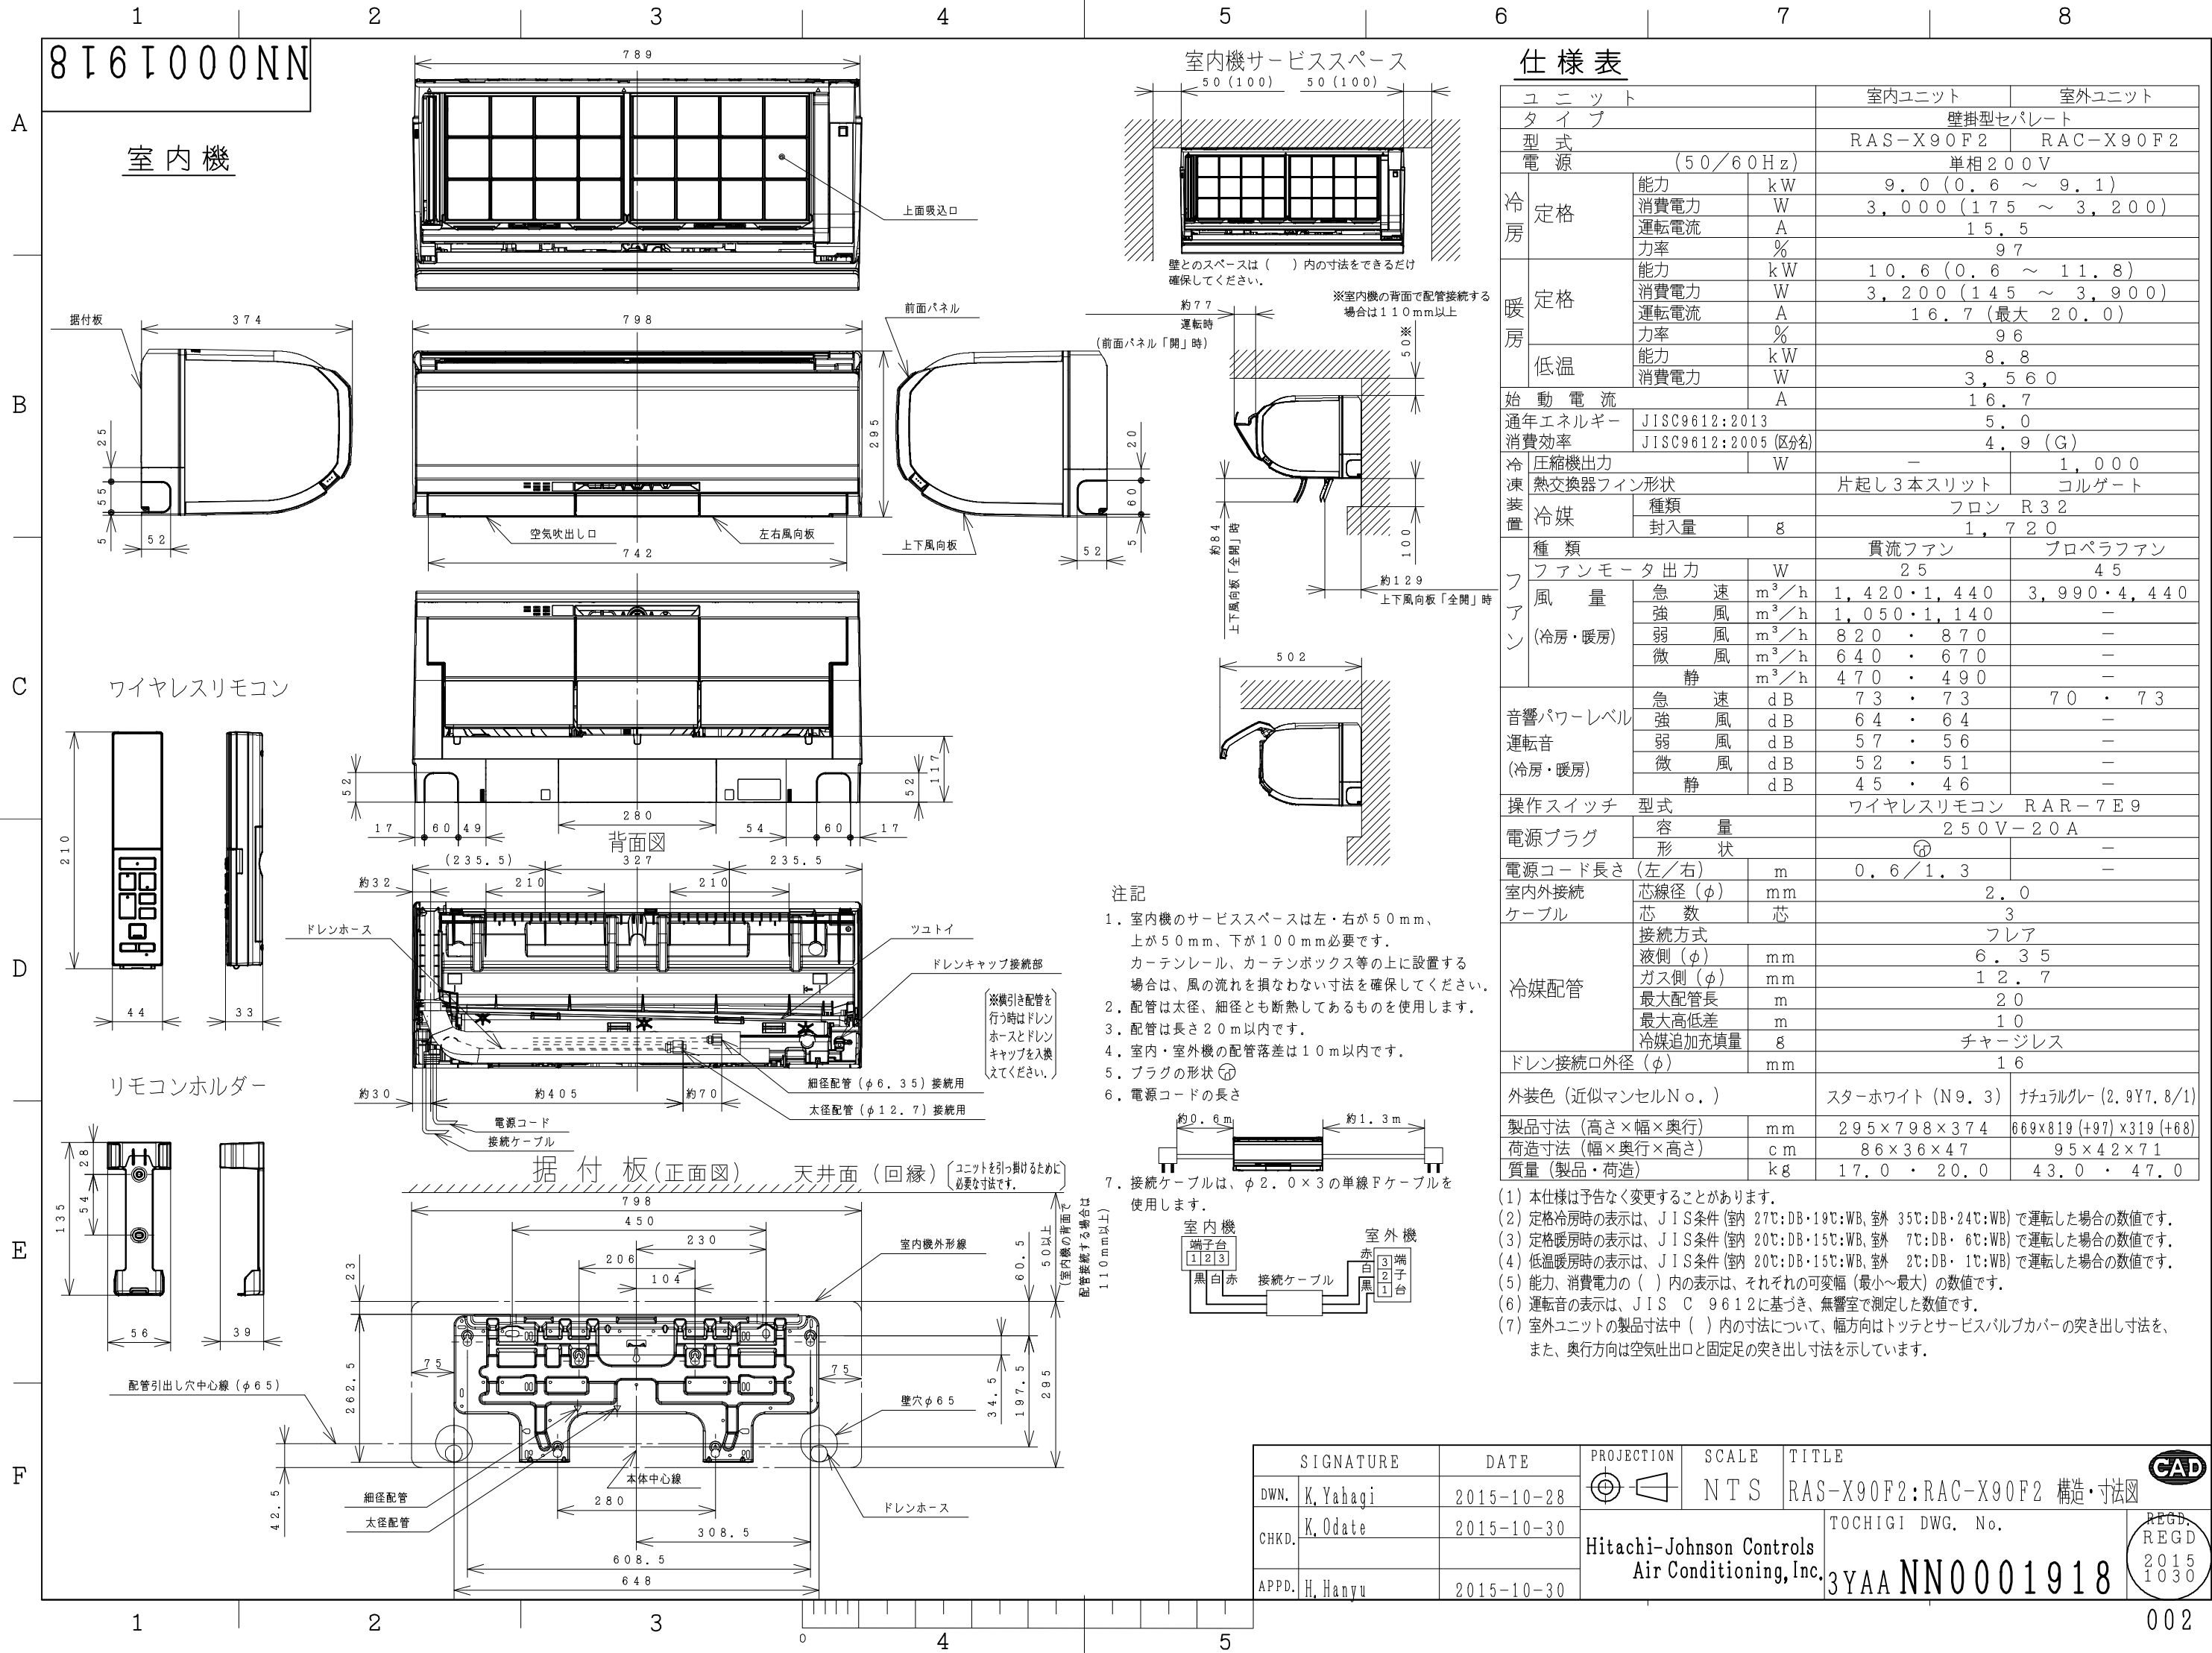

SIGNATURE	DATE	PROJECTION	SCALE	TITLE	CAD
DWN. K. Yahagi	2015-10-28		NTS	RAS-X90F2:RAC-X90F2 構造・寸法図	
CHKD. K. Odate	2015-10-30	Hitachi-Johnson Controls Air Conditioning, Inc.		TOCHIGI DWG. No.	REGD. REGD 2015 1030
APPD. H. Hanyu	2015-10-30			3YAA NN0001918	

- (1) 本仕様は予告なく変更することがあります。
(2) 定格冷房時の表示は、JIS条件(室内 27℃:DB・19℃:WB、室外 35℃:DB・24℃:WB)で運転した場合の数値です。
(3) 定格暖房時の表示は、JIS条件(室内 20℃:DB・15℃:WB、室外 7℃:DB・6℃:WB)で運転した場合の数値です。
(4) 低温暖房時の表示は、JIS条件(室内 20℃:DB・15℃:WB、室外 2℃:DB・1℃:WB)で運転した場合の数値です。
(5) 能力、消費電力の()内の表示は、それぞれの変幅(最小~最大)の数値です。
(6) 運転音の表示は、JISC 9612に基づき、無響室で測定した数値です。
(7) 室外ユニットの製品寸法中()内の寸法について、幅方向はツツとサービスバルブカバーの突き出し寸法を、また、奥行方向は空気吐出口と固定足の突き出し寸法を示しています。



室 外 機



The diagram illustrates the electrical connections for a car stereo system. Key components and their connections include:

- Power Base (電源基板):** Connected to the car battery (+) and ground (-). It includes a 3A fuse (FU1) and a transformer (TH001).
- Amplifier (アンプ):** Receives power from the power base and is connected to the car's electrical system.
- Tuner (チューナー):** Connected to the power base and the car's electrical system.
- Speakers (スピーカー):** Connected to the amplifier and the car's electrical system.
- Car Battery:** The primary power source, connected to the power base and the car's electrical system.
- Car's Electrical System:** Includes the car's battery, ground, and various electrical components like the horn, lights, and other accessories.

The diagram uses standard electrical symbols and labels to identify components and their connections. It also includes a legend for the car's electrical system, showing the connection points for the battery, ground, and various electrical components.

- ※1 HA接続コード：部品番号〔SP-HAC1〕
 ※2 標準アダプター：HA-S100TSA
 ※3 RACアダプター：PSC-6RAD
 ※4 無線LAN接続アダプター：SP-WL2

