

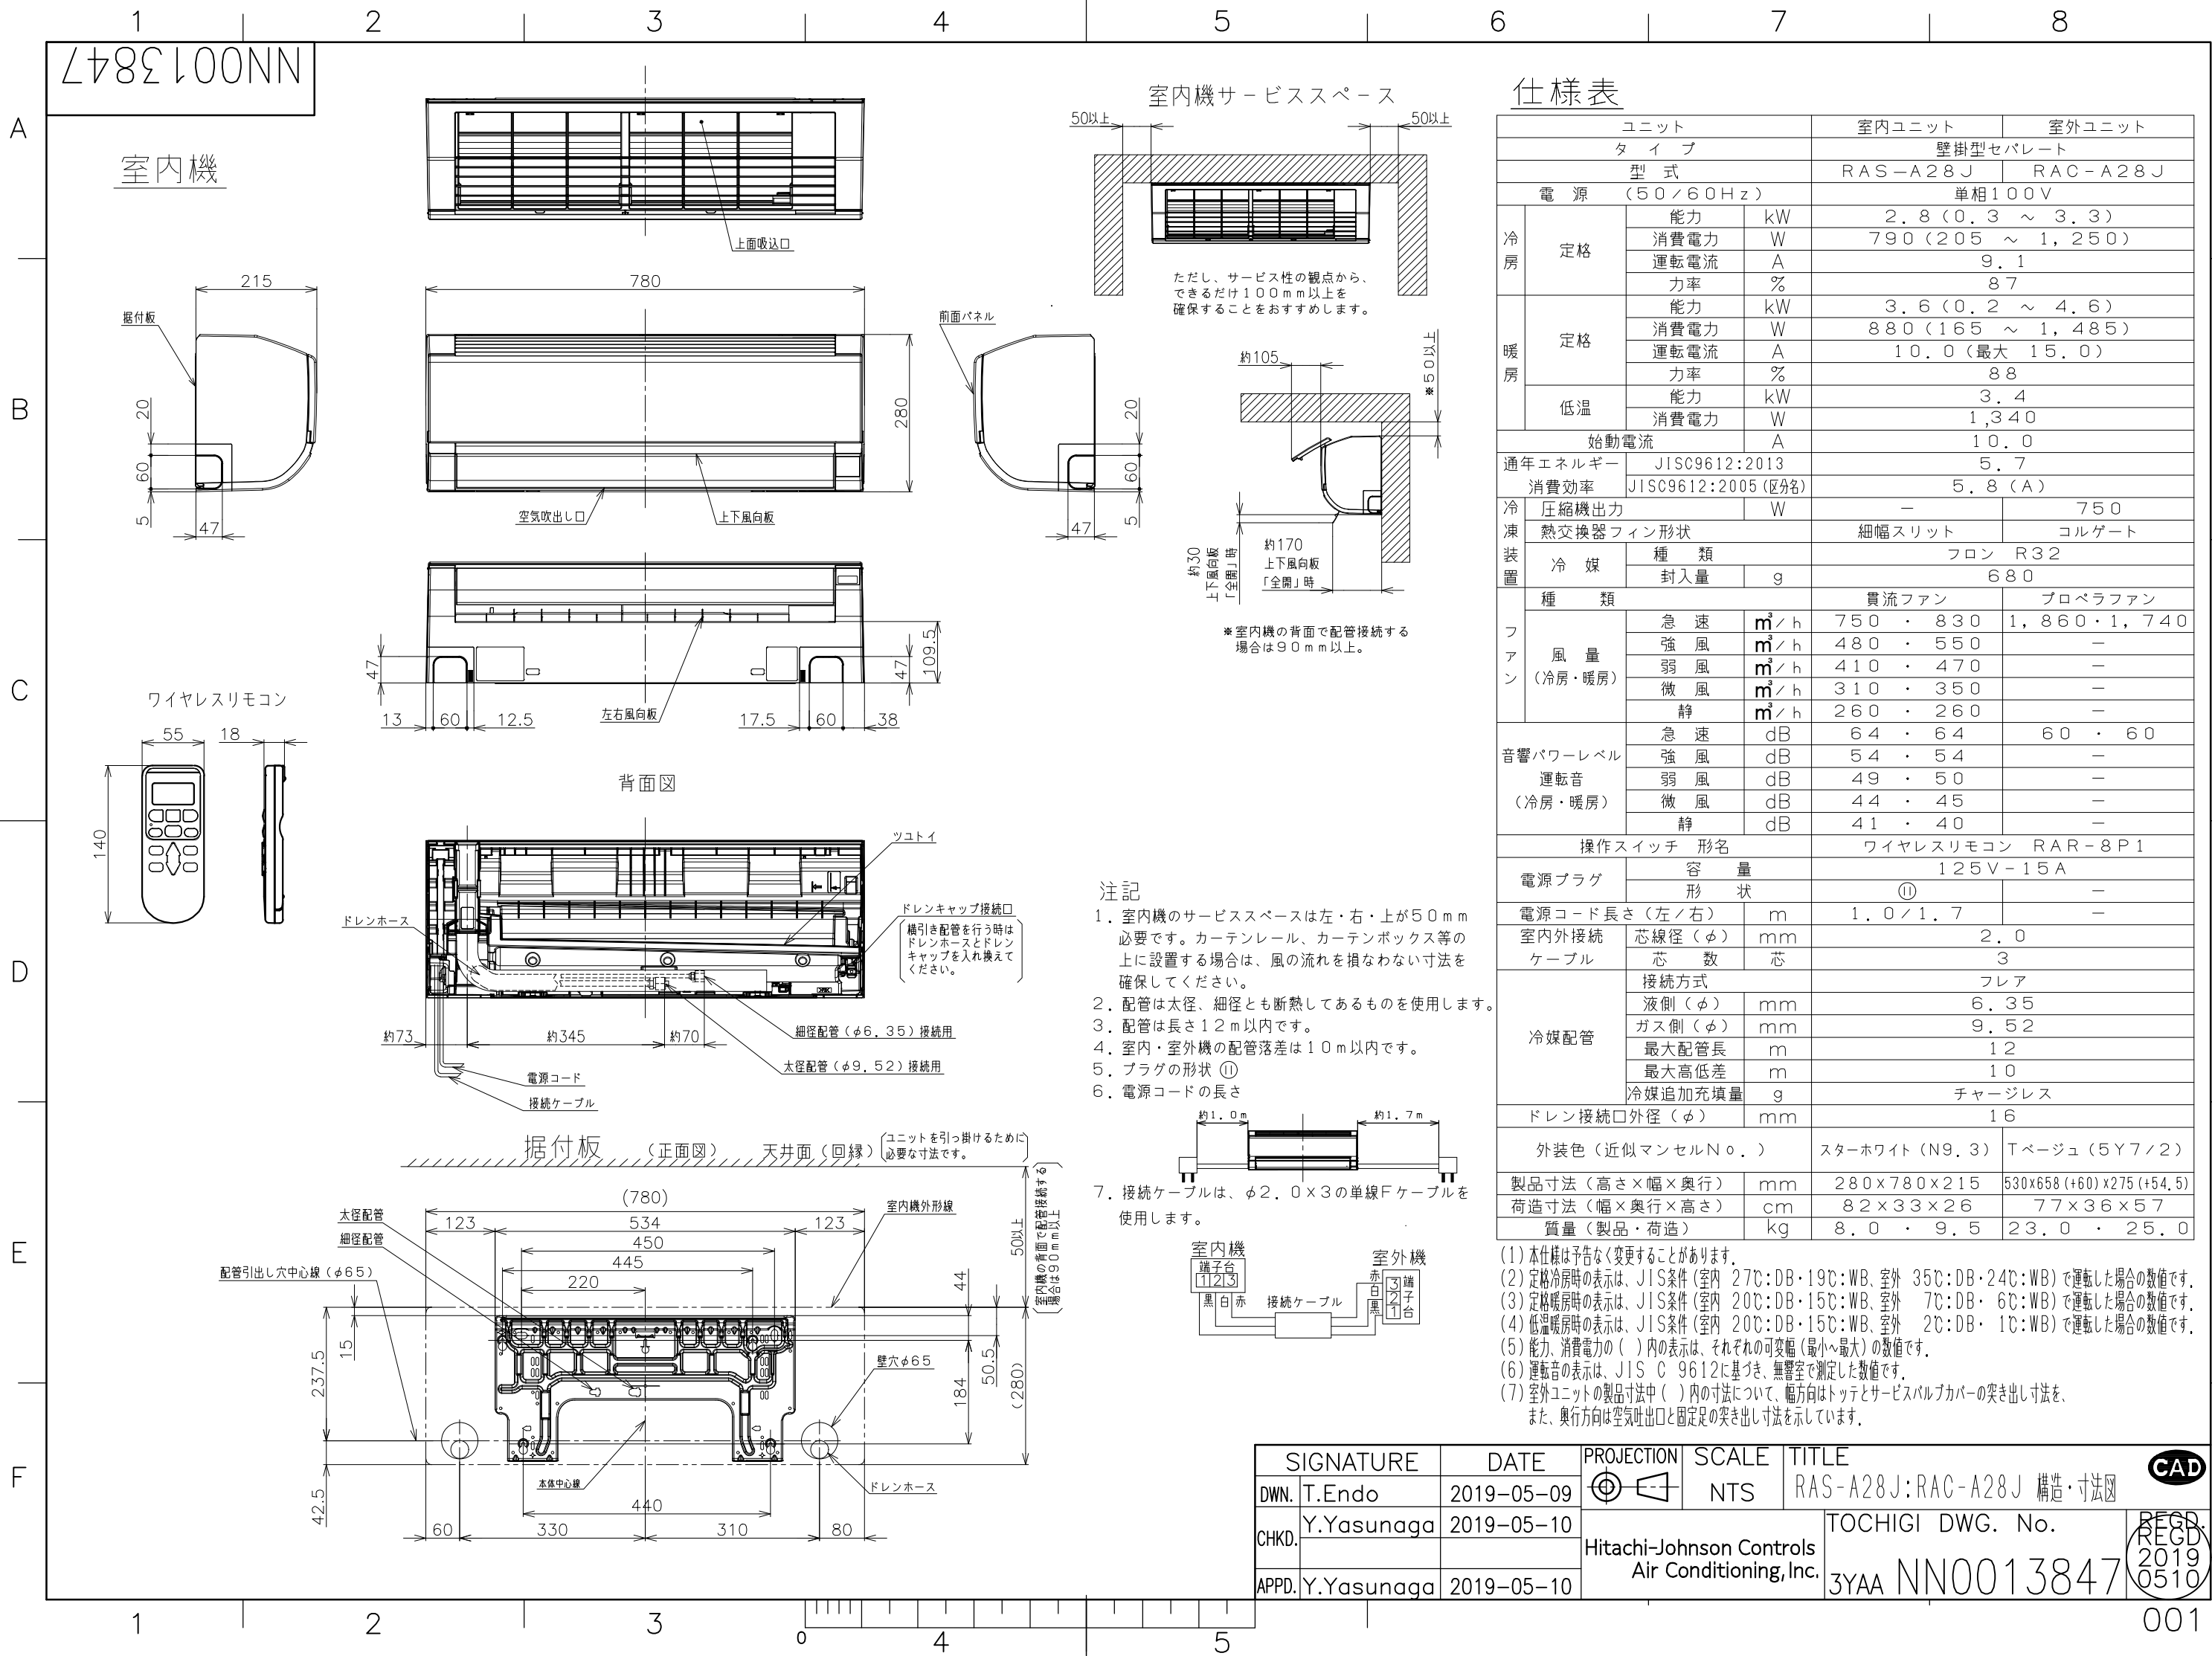


Diagram illustrating the required clearance for the outdoor unit (室外機) installation:

- Top Clearance:** 50 (mm) clearance from the ceiling (天井).
- Front Clearance:** 100 (mm) or more (100以上) clearance from the front wall.
- Side Clearance:** 200 (mm) or more (200以上) clearance from the side wall.
- Bottom Clearance:** 300 (mm) or more (300以上) clearance from the floor.
- Dimensions:**
 - Unit height: 275 (mm)
 - Unit width: 658 (mm)
 - Clearance width: 718 (mm)
- Wind Direction:** Indicated by an arrow labeled "風" (Wind) pointing downwards.
- Label:** "上面 200以上" (Top surface 200 or more) is written inside the unit area.


1. 本体の前、後、左、右、上方向に上図の $\longleftrightarrow$ 印の間隔をあけられ、2方向以上開放できるところに据え付けてください。
2. 効率のよい運転のため、周囲のスペースをできるだけ広くあけてください。

SIGNATURE		DATE	PROJECTION	SCALE	TITLE	
DWN.	T.Endo	2019-05-09		NTS	RAS-A28J:RAC-A28J 構造:寸法図	
CHKD.	Y.Yasunaga	2019-05-10	Hitachi-Johnson Controls Air Conditioning, Inc.			
APPD.	Y.Yasunaga	2019-05-10	TOCHIGI DWG. No. 3YAA NN0013848			
						


1 2 3 4 5 6 7 8

NN0013849


回路図

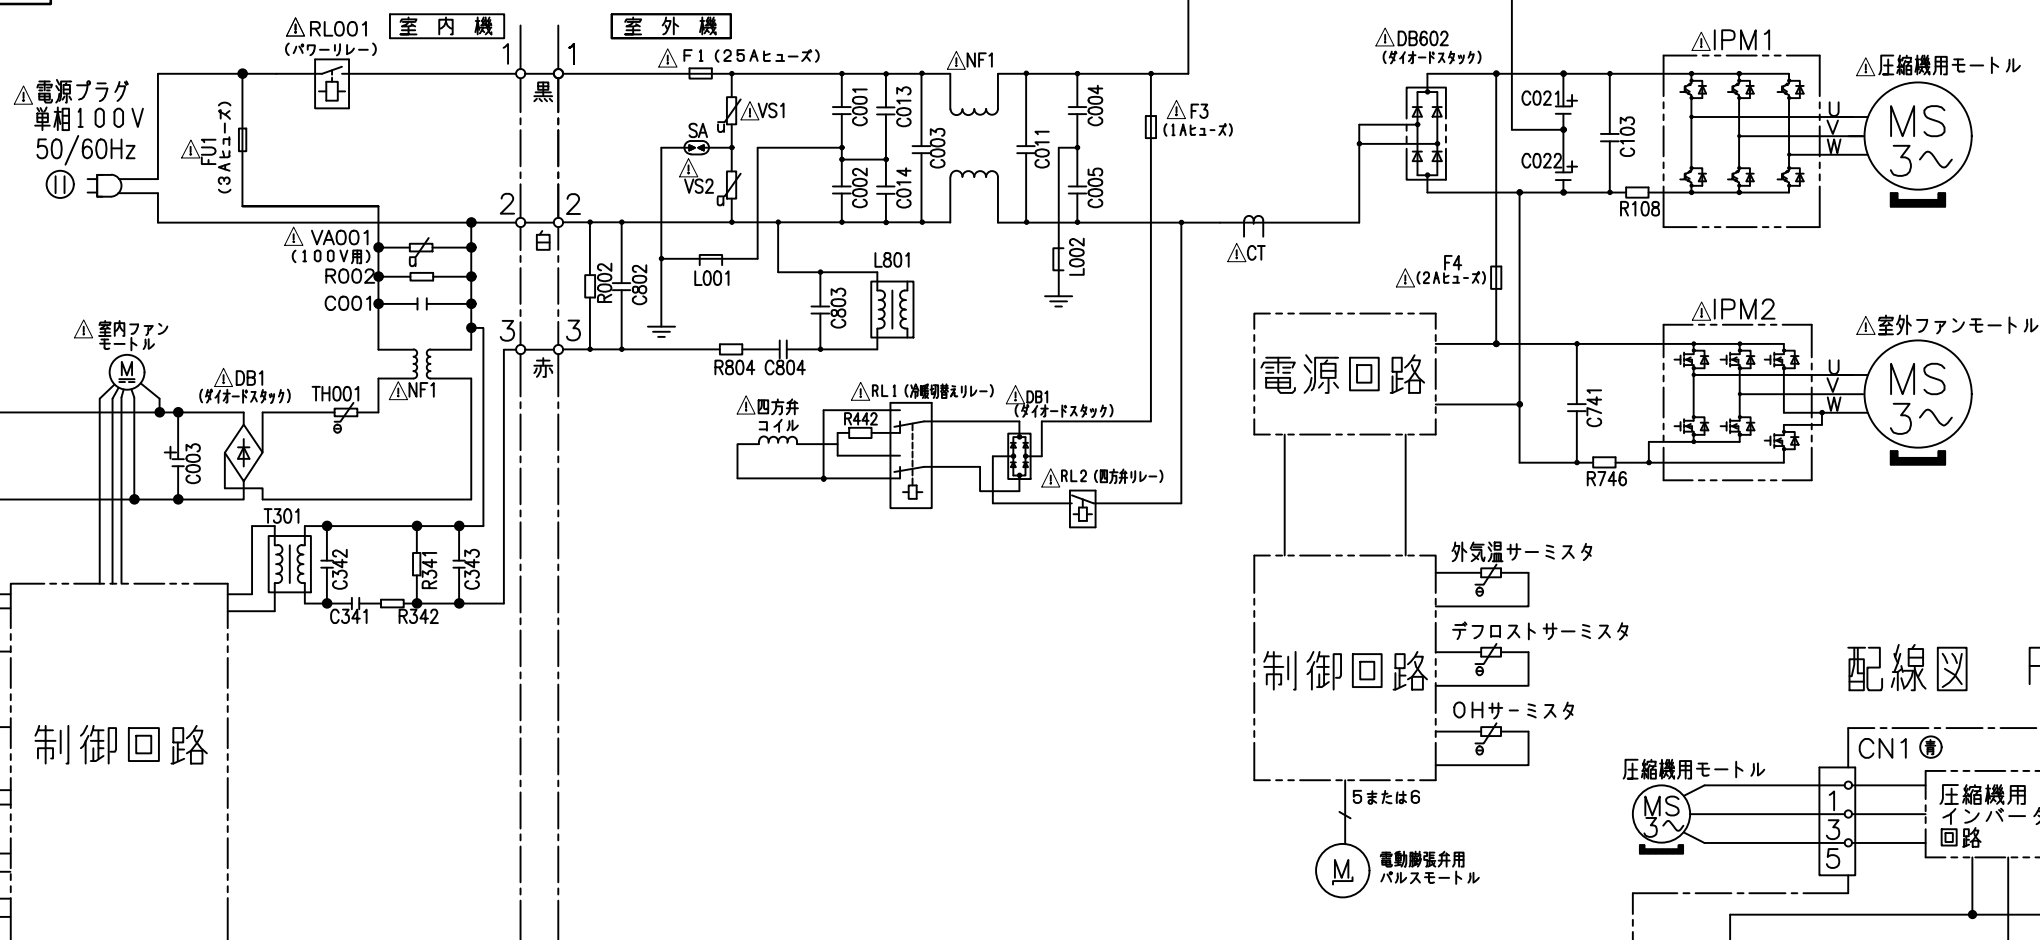

配線図 RAS-A28J

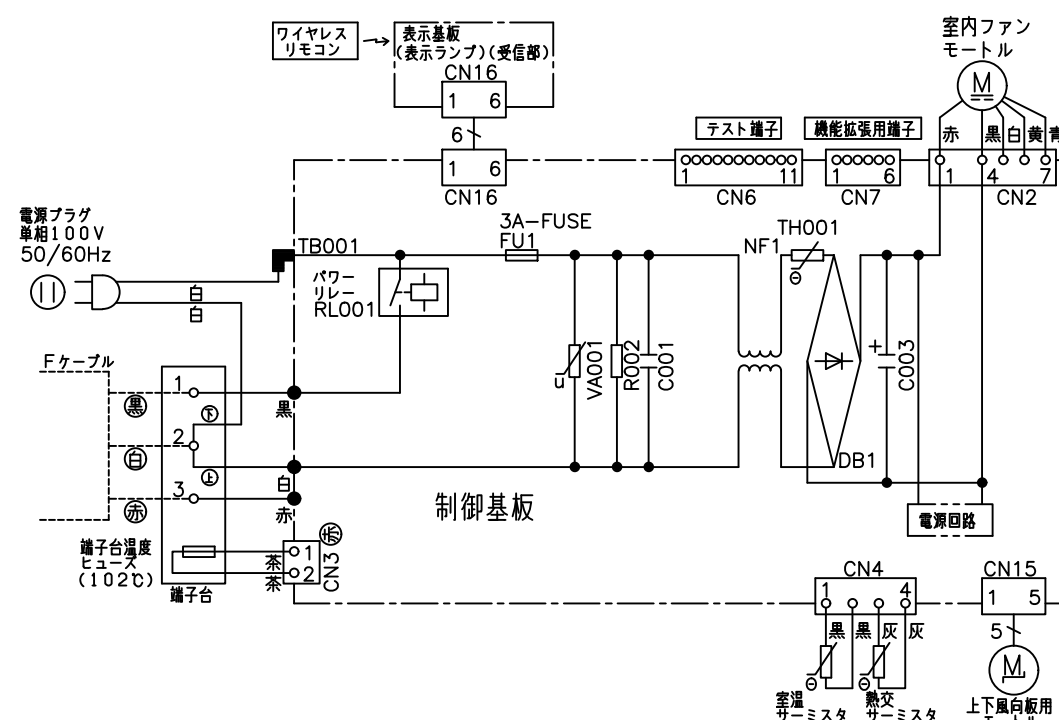

配線図 RAC-A28J

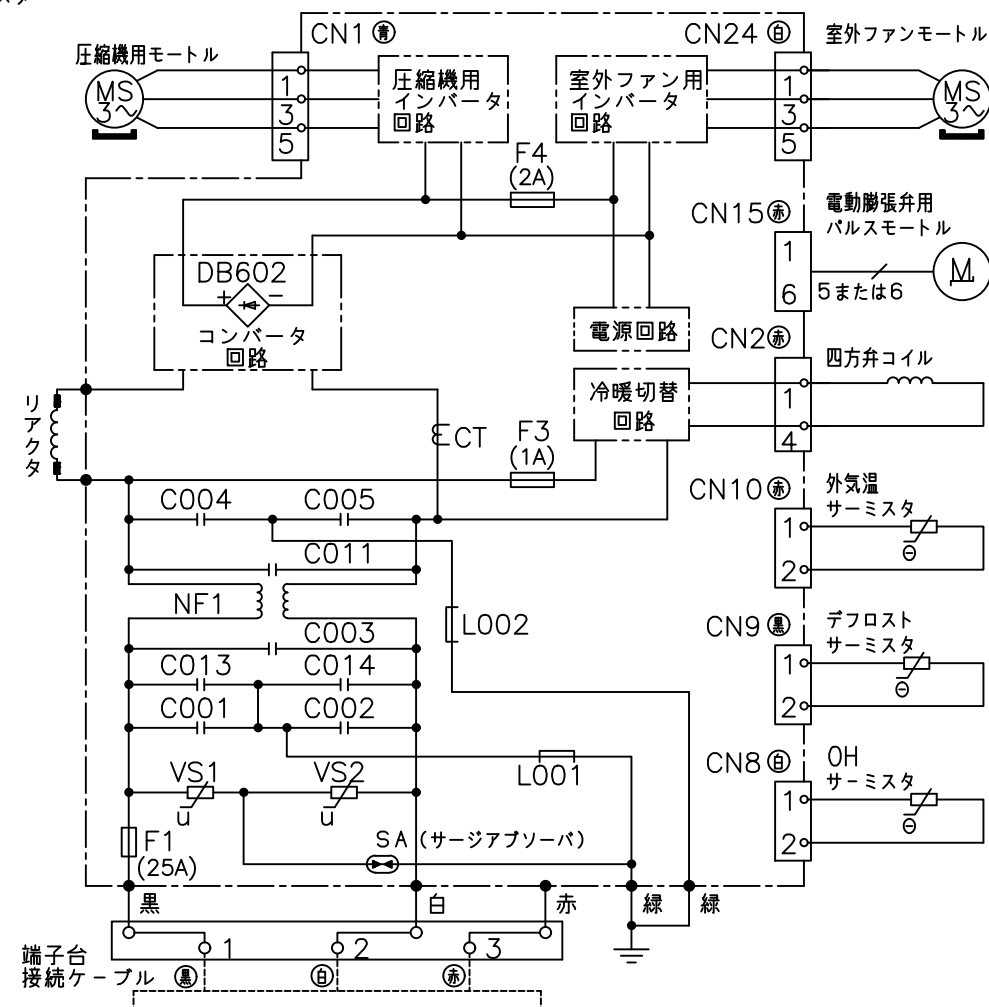

- ・ホームオートメーションを行う場合
室内基板の「テスト端子」CN6に別売の*1 HA接続コードを
差込んで*2標準アダプターと接続してください。
- ・H-LINKに接続する場合
室内基板の「機能拡張用端子」CN7に別売の*3 RACアダプターの
端子を差込んでください。
- *1 HA接続コード：部品番号 (SP-HAC1)
- *2 標準アダプター：HA-S100TSA
- *3 RACアダプター：PSC-6RAD

SIGNATURE	DATE	PROJECTION	SCALE	TITLE
DWN. T.Endo	2019-05-10	第一角法	NTS	RAS-A28J: RAC-A28J 回路図: 配線図
CHKD. T.Narabu	2019-05-10	Hitachi-Johnson Controls Air Conditioning, Inc.	TOCHIGI DWG. No.	3YDA NN0013849
APPD. Y.Yasunaga	2019-05-13			

CAD

REC'D
2019
0513

001